

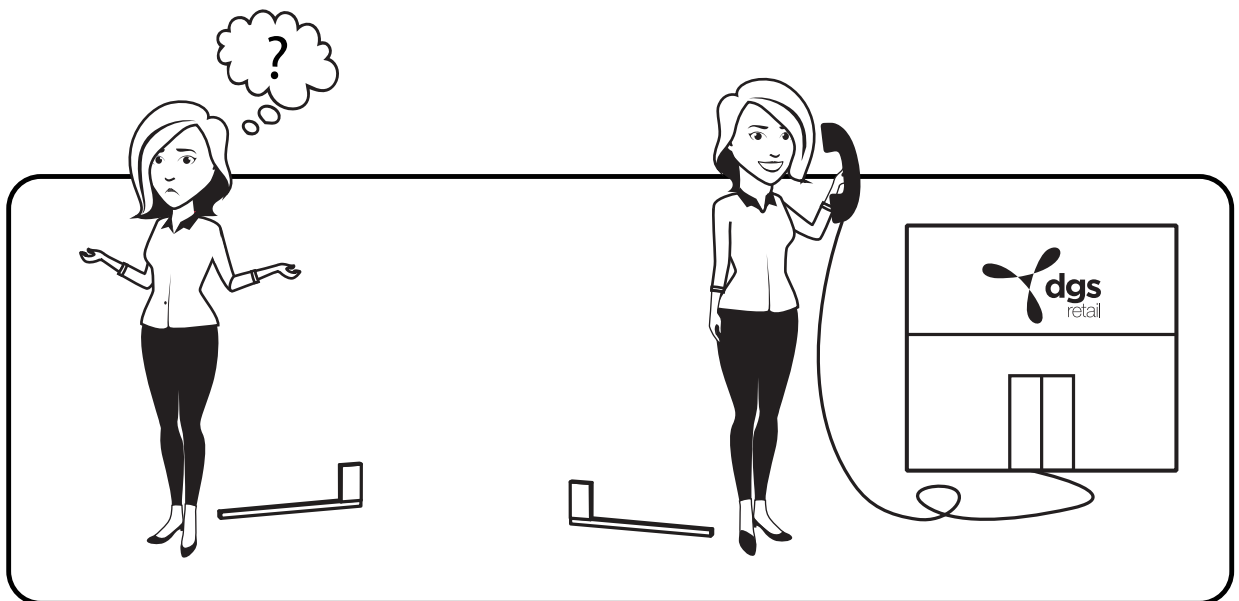



Gondola Sign, Chalkboard Header, 144W (ACH12)

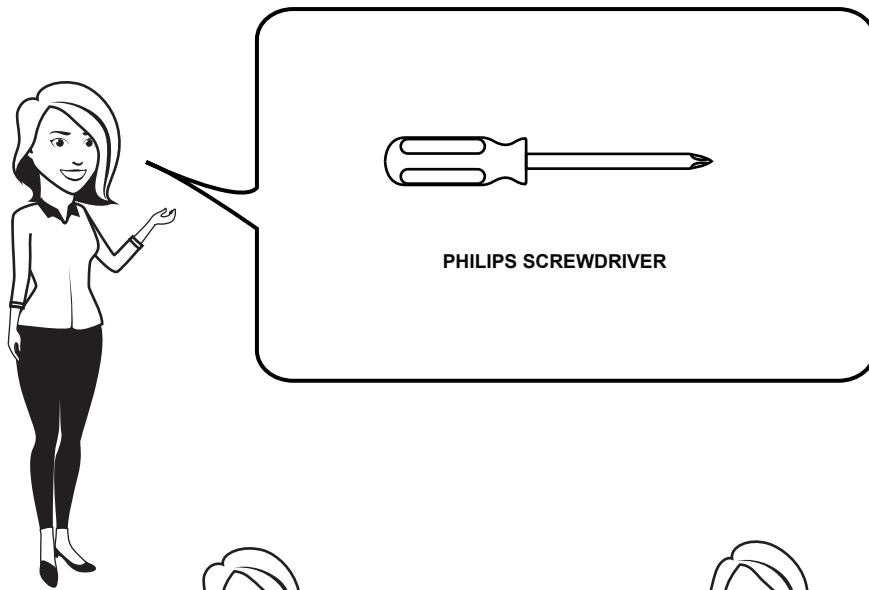

Part List:

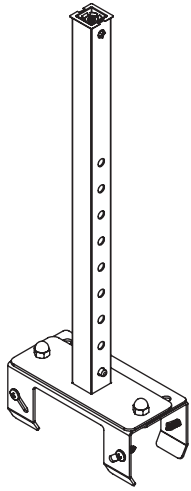


Adjustable Base With
Square Telescopic Tube x5

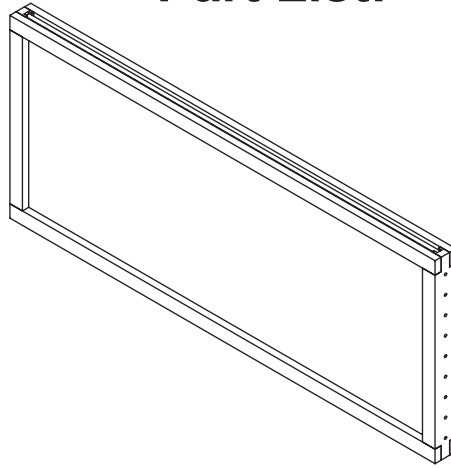


Gondola Sign Chalkboard Assembly x4




Chalkboard Sign
Hanging Bracket x8

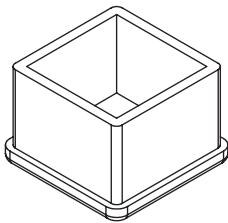


Tube Cap x2

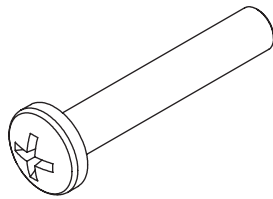

1/4-20 x 1.5L Philips
Head Machine Screw x5

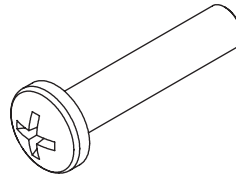


1/4-20 x 1.25L Philips
Head Machine Screw x8

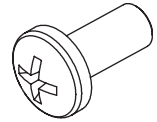


1/4-20 x .500 L Philips
Head Machine Screw x8




#8 x .375"L Philips Head
Wood Screw x16

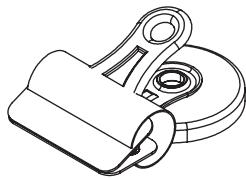


Bulldog Magnetic Clip,
29mm Base x8

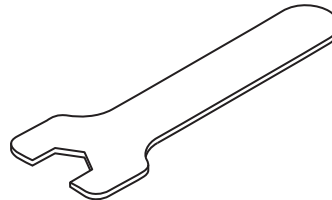


Wrench x1

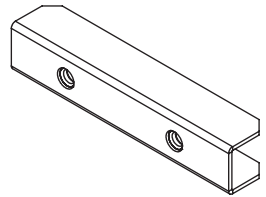


Horizontal Rail Connector x4

 

#10 x .625"L Philips
Head Wood Screw x30

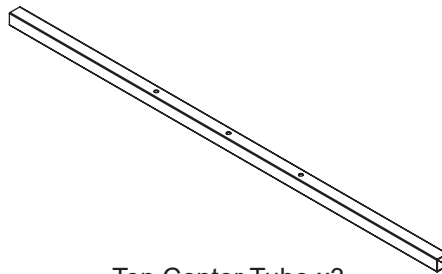


Top Center Tube x3

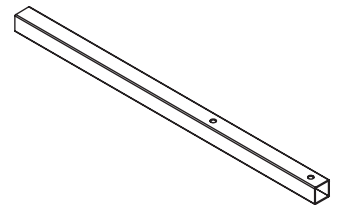

Top Side Tube x2


1**Assemble Adjustable Bracket:**

If the bracket comes disassembled in a kit, assemble it properly and adjust its size based on the installation method. Don't fully tighten the nuts as this will be done later.

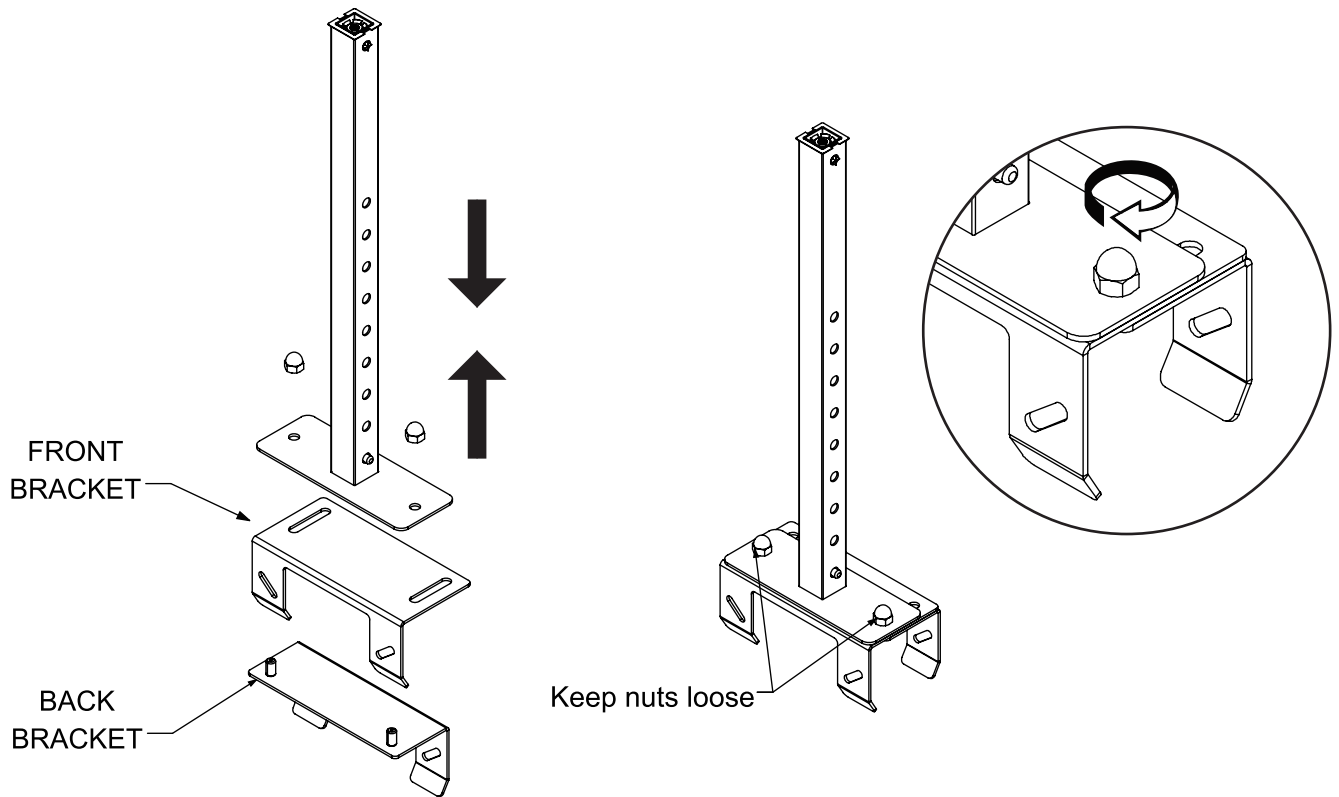**2****Assemble Chalkboard Panel with Hanging Brackets:**

Align holes on sides of wood frame with holes on hanging brackets, and use appropriate set of two holes on each side to get required mounting height of chalkboard. Adjustments can be made in 1" increments from 0" (standard highest setting) to (-) 7" (lowest setting).

Attach securely each hanging brackets to the frame using (2x) #8 X .375" wood screw (4 screws per frame).

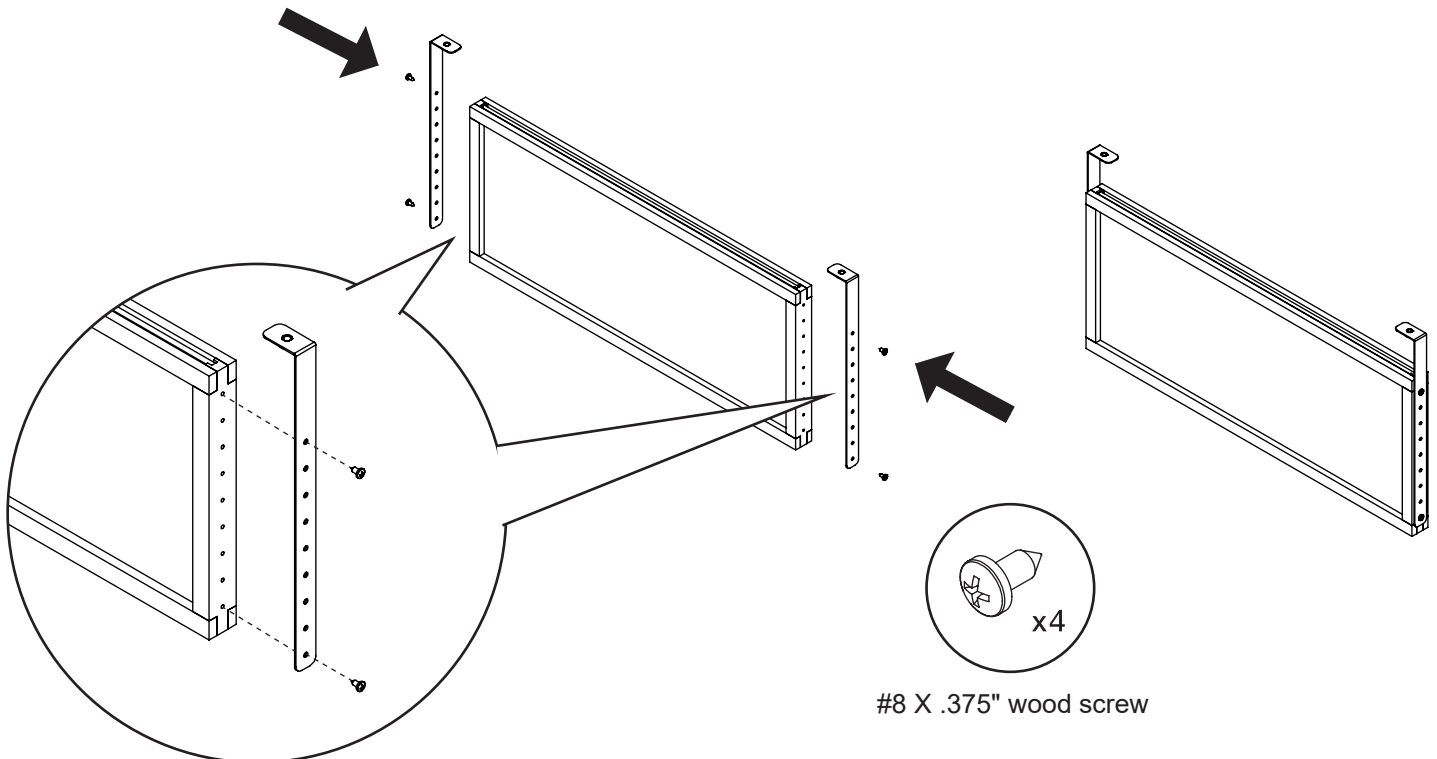


3

Assemble Top Side Tubes with Tube Caps and Horizontal Rail Connectors (x2):

Press-in tube cap on side of tube where hole closest to the edge goes through both walls.

Use hammer or rubber mallet if necessary.

Slide-in horizontal rail connector to the side of tube where hole closest to the edge goes through one wall, and attach connector securely using (1x) 1/4"-20 x .500"L machine screw.

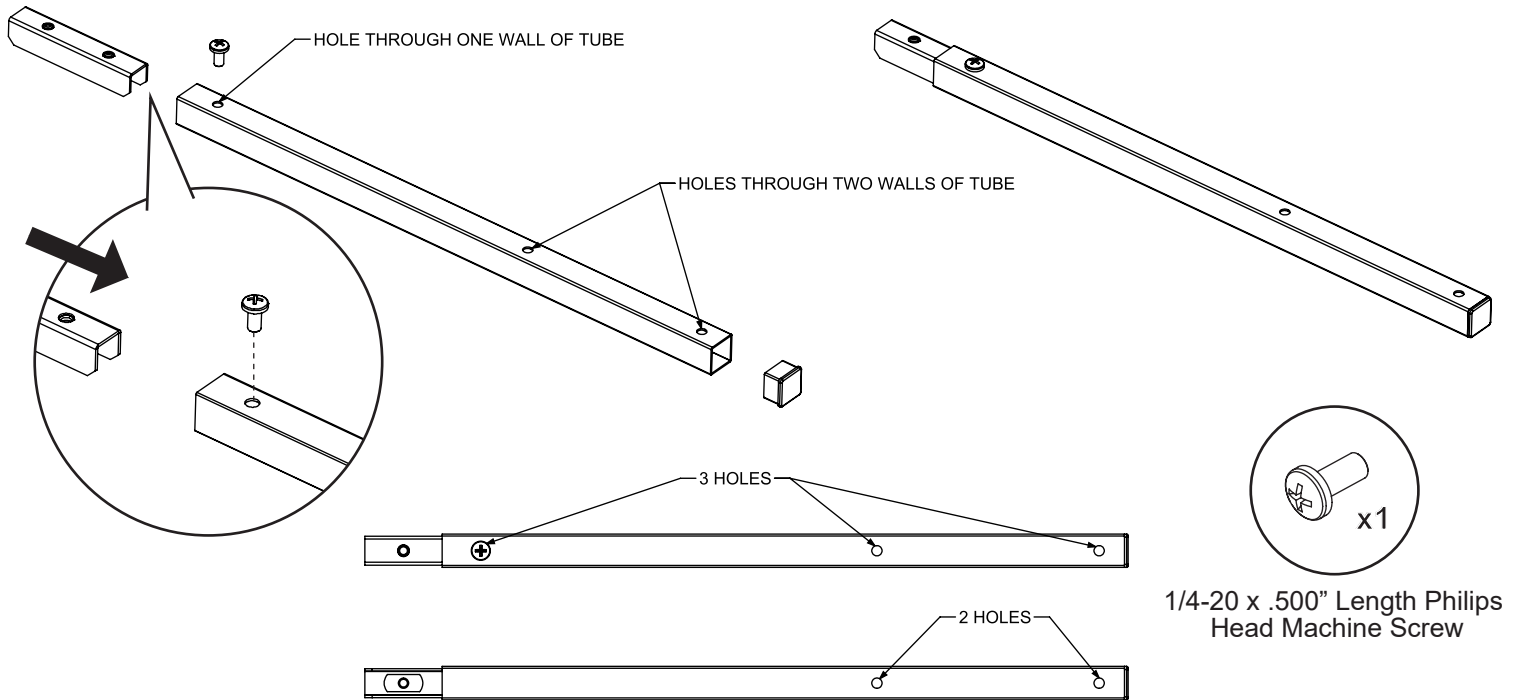


1/4"-20 x .500" Length Philips Head Machine Screw

4

Assemble Top Side Tubes with Top Center Tubes (x2):

Slide center tube on horizontal rail connector attached to the side tube, align holes in tube and connector, and attach connector securely using (1x) 1/4"-20 x .500"L machine screw.

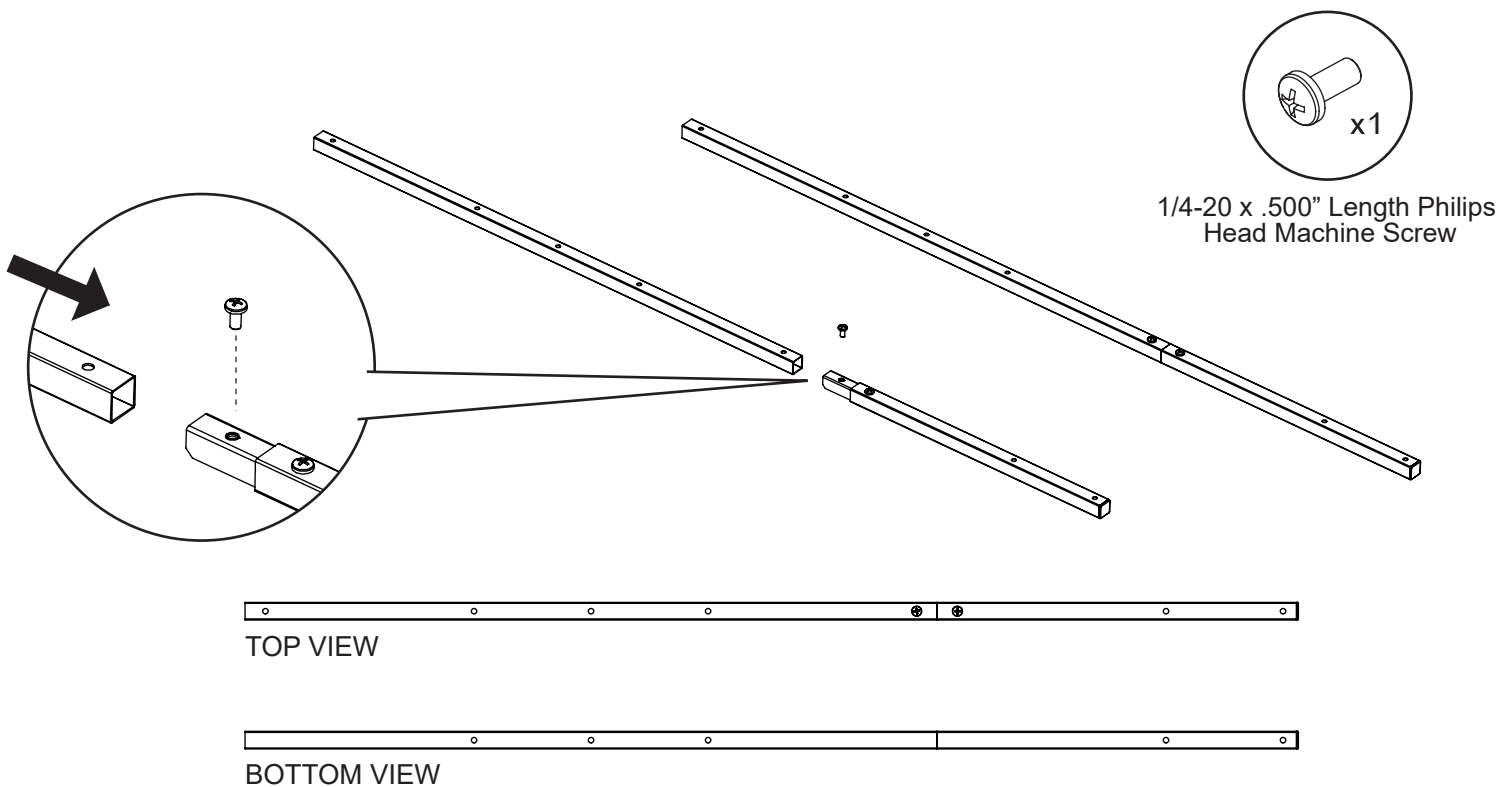


1/4"-20 x .500" Length Philips Head Machine Screw

5

Assemble Chalkboard Frames to Side Tube sub-assemblies (x2):


Align 2 holes on center and side tubes with holes in hanging brackets, and attach securely tubes to brackets using (2x) 1/4-20 X 1.250"L machine screw. Chalkboard sign should be centered below connection line of both tubes, and screws attaching connector should point toward frame.

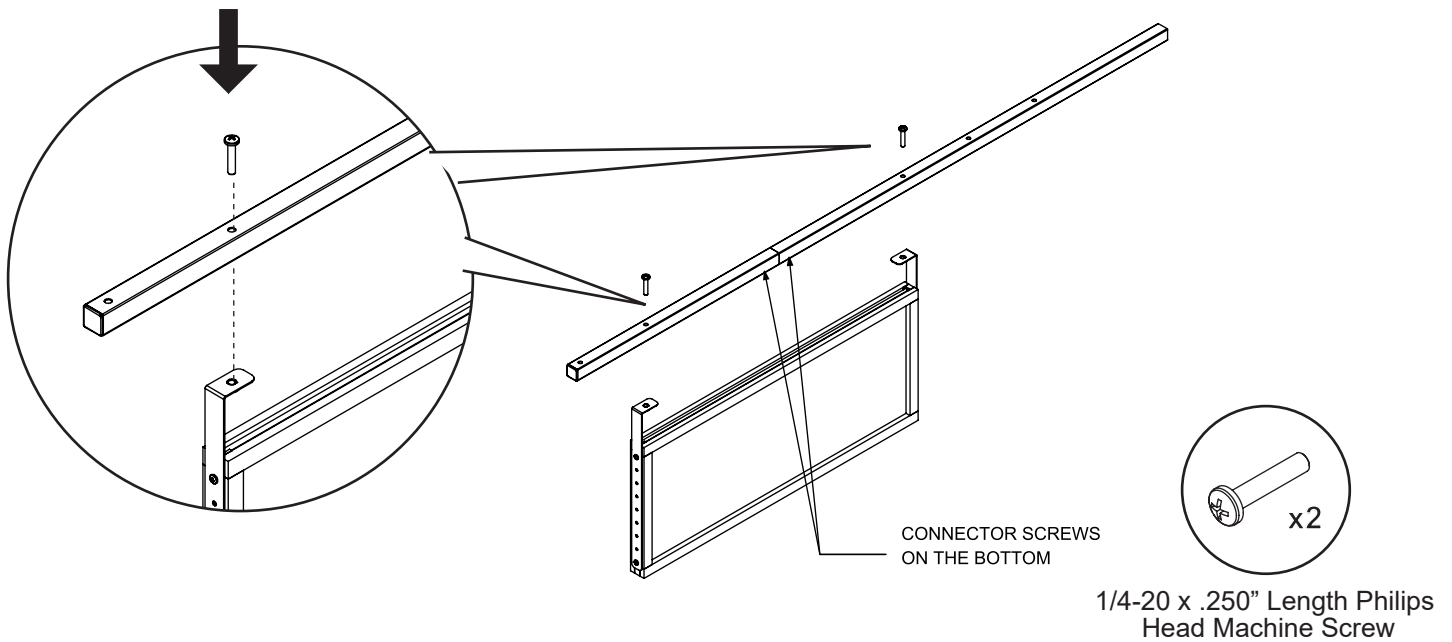

6

Assemble Top Center Tube with Horizontal Rail Connectors (x1):



Slide-in horizontal rail connectors to sides of one of the center tubes, and attach connectors securely using (2x) 1/4"-20 x .500"L machine screw.

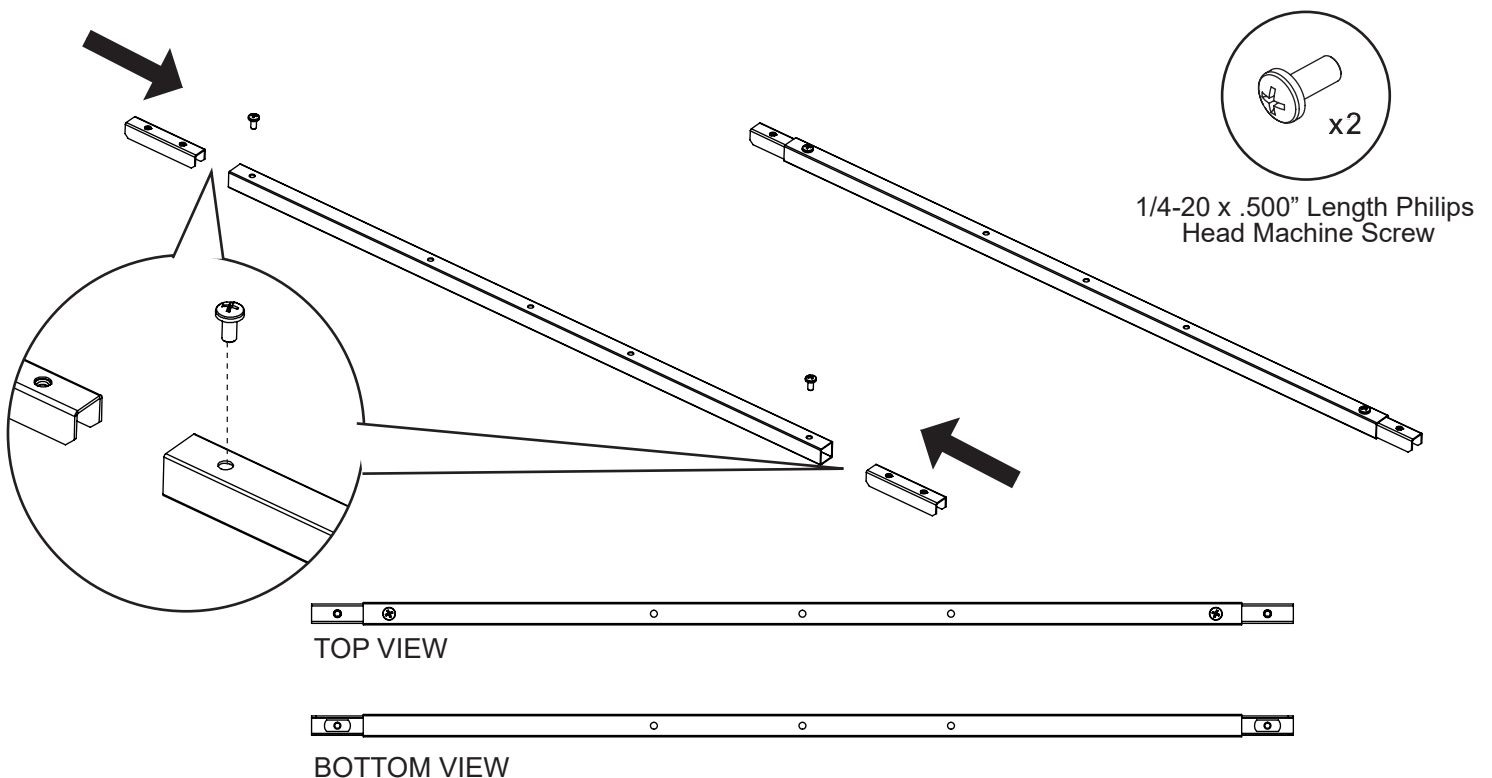

7

Assemble Side Chalkboard Frame with Top Tube Subassembly with Adjustable Bases:


Line up bases on the ground and starting at one end of the setup align 1st and 4th holes on top tube (counting from plastic cap) with holes in tube inserts inside vertical tubes, and attach securely frame assembly to bases using (2x) 1/4-20 X 1.500"L machine screw. Plastic tube end cap needs to be facing outside.

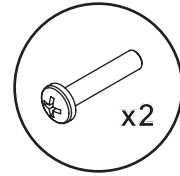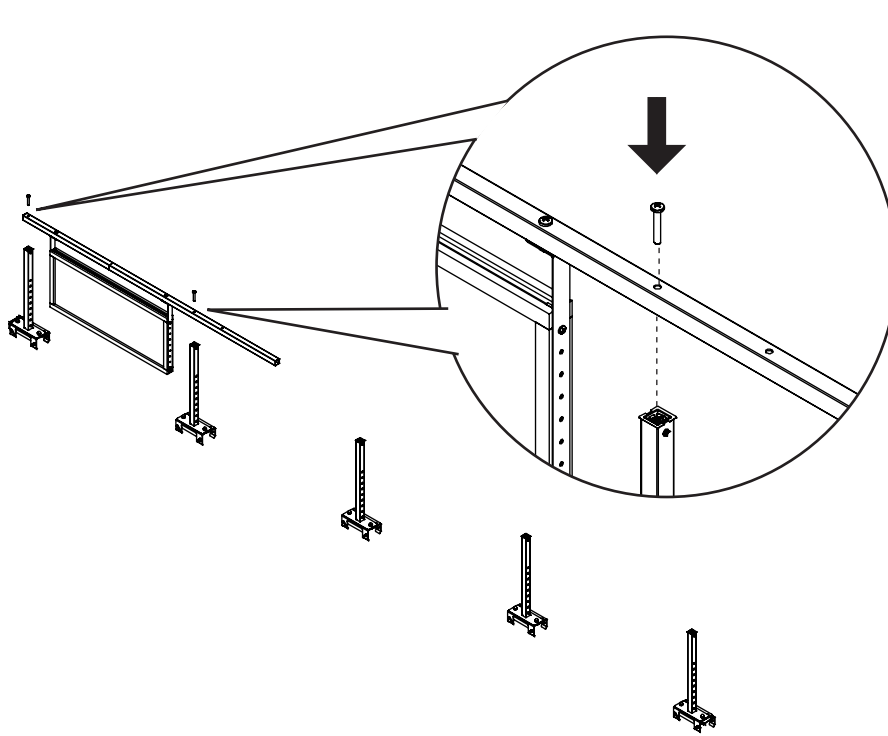

1/4-20 x .500" Length Philips Head Machine Screw

Adjust Height of Sign:



If required, adjust height of sign by pressing spring buttons on telescopic tubes and sliding the sign up to the necessary position. Height can be adjusted in 1" increments, and can be changed from 0" up to 8". All vertical posts have to be adjusted to the same height in order for the sign to be level. Height adjustment is possible after the sign is fully assembled.

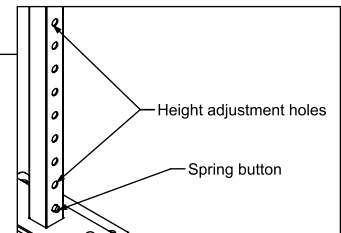



8

Assemble Top Center Tube with Side Tube and Adjustable Base:

Slide horn on center tube into open tube end on already installed top tube, align holes and attach center tube using (1x) 1/4-20 X .500"L machine screw. Attach center tube to the center base through center hole using (1x) 1/4-20 X 1.500"L machine screw.

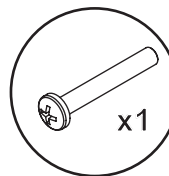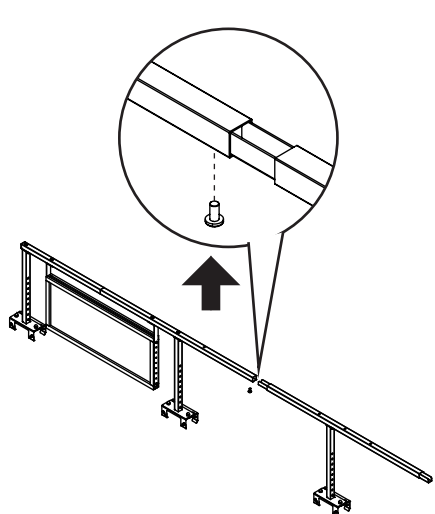

1/4-20 x 1.50" Length Philips Head Machine Screw

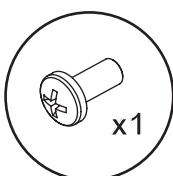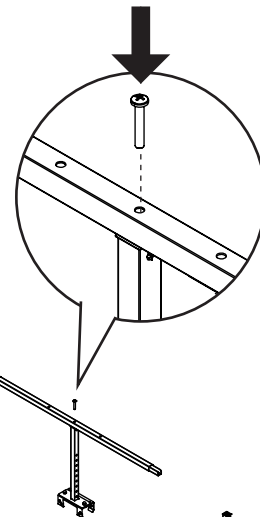


1/4-20 x .500" Length Philips Head Machine Screw

9

Assemble Second Side Chalkboard Frame with Tubes Subassembly with Adjustable Bases:

Slide open end of side top tube on horn on center tube, align holes and attach side tube using (1x) 1/4-20 X .500"L machine screw.


Attach side tubes to two side bases through top holes using (2x) 1/4-20 X 1.500"L machine screw.

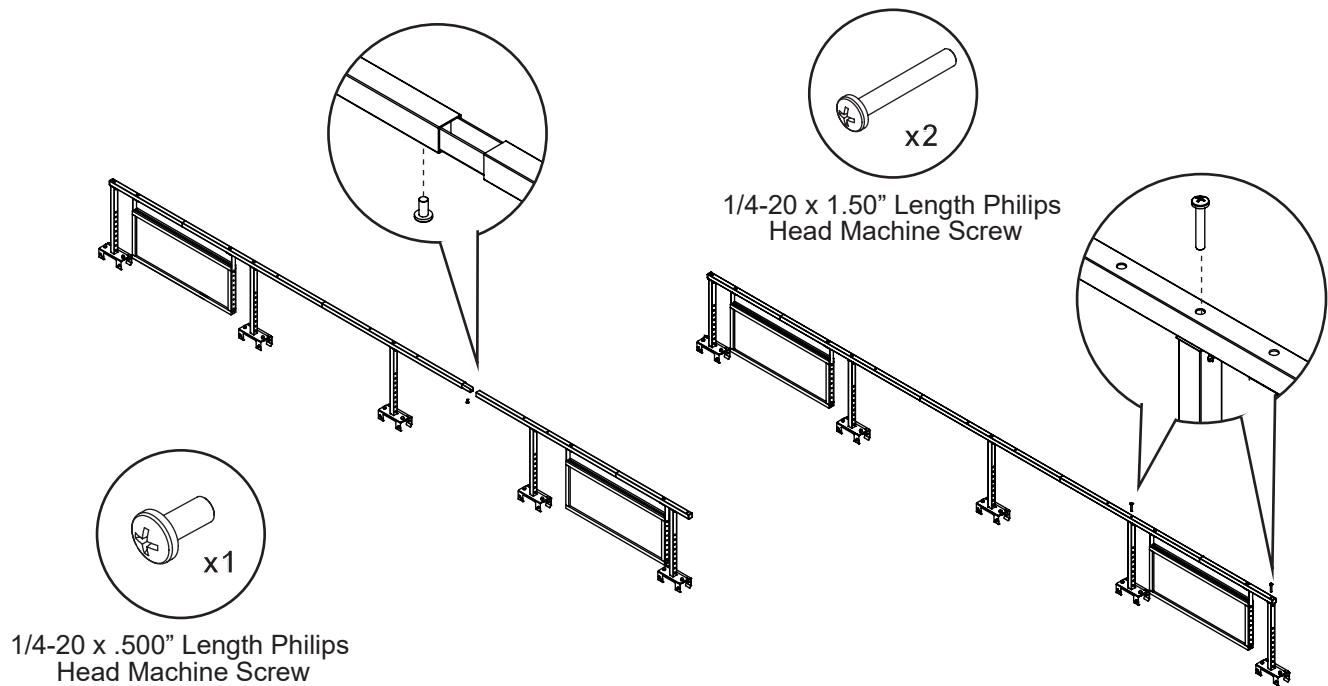

10

Assemble Center Chalkboard Frames with Top Tubes (x2):


Align top holes in hanging brackets with hole in top tubes, and attach each frame using (2x) 1/4-20 X 1.250"L machine screw.

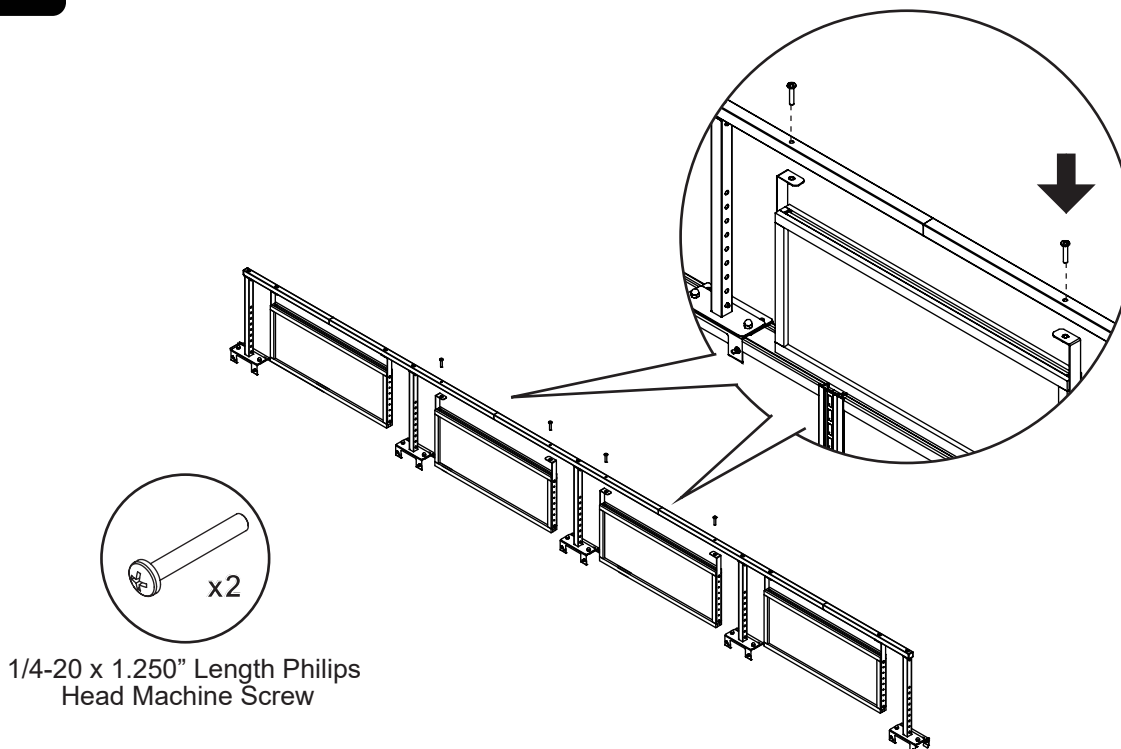

11

Place Chalkboard Frame Assembly on Top of Gondola:

Proceed to slide front and back brackets on base all the way toward wood panel on gondola, and attach it securely to wood panel of gondola using (4x) #10 x .625" L PH wood screw through slots in brackets. Tighten top acorn nuts.

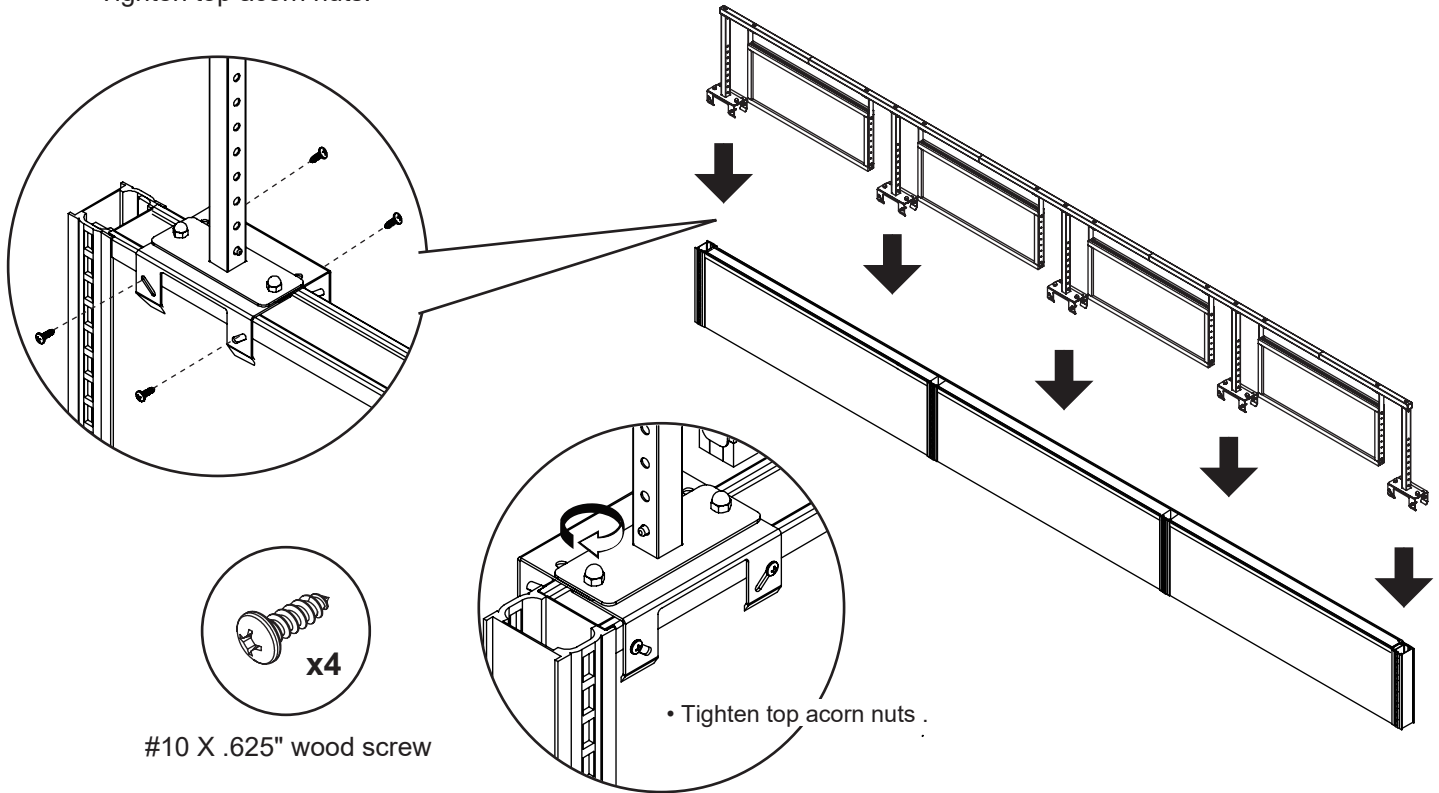

12

Place Magnet Clips on Chalkboard.

Adjust Height if not completed in step 7.

